



User guide


© AT&T 2000. Reproduction prohibited. The manufacturer reserves the right to modify the specifications of its products in order to make technical improvements or comply with new regulations. The Model name and logo are registered trademarks of Alcatel, licensed to ATLINKS.



ATLINKS
Sales and marketing departments:
Head office: 22, quai Gallieni - 92150 Suresnes - France
Joint-stock company with capital of 500 000 € - 568 823 747 RCS Nanterre

Ref. 905-177002E-000 - 10/00/2010

1. GETTING TO KNOW YOUR TEMPORIS 700

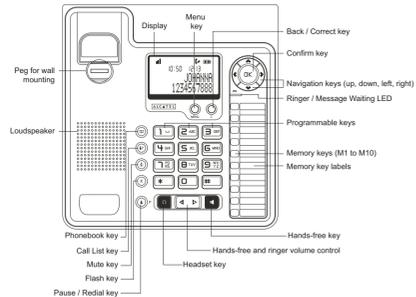

1.1 DISPLAY

Your TEMPORIS 700 has a four-line display:
• 1 line of icons and function data, and 3 lines of 16 alphanumeric characters each




1.2 WHAT'S IN THE BOX

- 1 TEMPORIS 700 telephone set
- 1 spiral cord
- 1 RJ11/RJ11 telephone cord
- 1 memory key label sheet
- 7 user guides (English, French, Spanish, German, Dutch, Portuguese and Italian)
- 1 telephone cord adapter

2. SETUP


2.1 CONNECTING THE HANDSET

- Plug one end of the spiral cord into the handset at (A), and the other end into the socket on the left side of the phone (B).



2.2 CONNECTING THE TELEPHONE


- Plug the telephone cord into right-hand socket under the set and into the wall socket.



NOTE: The extra socket is for connecting a modem.

2.3 WALL MOUNTING

- Turn over the wall mounting peg (small grooved plastic part) on the base using a coin.
- Drill two 6 mm holes 70 mm apart.
- Fit two wall plugs and insert wood screws* (3.5 mm in diameter and 30 mm long).
- Mount the base on the 2 screws by pulling it downwards.



3. USE

3.1 CALL / MESSAGE WAITING LED

This light flashes in time with the ringer when you receive a call. It goes out as soon as you take the line. If you are connected to an ALCATEL PABX with a voicemail service, the message waiting LED tells you there is a message in your mailbox. There are two different ways of dialling:
• by lifting the handset, then dialling,
• by dialling in on-hook mode.

3.2 DIALLING IN ON-HOOK MODE

- 1 Press the hands-free key **[H]**, then dial your correspondent's number.
- 2 Pick up the handset to talk. The key is backlit in blue.

3.3 USING HANDS-FREE MODE

If you are talking to somebody on the handset, and you want to hear and talk to them over the loudspeaker instead:

- 1 Press **[H]** and replace the handset.
 - ▶ The people around you can join in the conversation.
 - ▶ The key is backlit in blue.
- 2 To adjust the volume, use the **[V-]** and **[V+]** keys.
- 3 Lift the handset to return to private conversation mode.

3.4 DIALLING USING THE PHONEBOOK / MEMORY KEYS

The phonebook can hold up to 170 name and number entries and 10 quick-dial memory entries. Each entry can hold up to 20 digits and 16 characters. To program the phonebook and the quick-dial memory keys, see Section 4.9.

Using the phonebook to make a call

- 1 Press **[P]**.

Alphabetic order search

- 1 Press **[P]**.
- 2 Enter the first letter, or the first two letters, of the name you are looking for. The first name starting with that letter appears. To scroll down, press **[V-]**.

or

Manual search

- 2 Press **[V-]** or **[V+]** to scroll through the phonebook until you find the name you are looking for.
- 3 Press **[OK]** to initiate the call.
- or
- 3 Press **[H]** to dial your correspondent's number.
- or
- 3 Pick up the handset and make the call.

NOTE: The call timer starts about 12 seconds after the last digit is dialled.

Using a memory key to make a call

- 1 Press the memory key associated with the person you want to call.
- 2 Pick up the handset to initiate the call.

or

- 2 Press **[H]** to talk in hands-free mode.

NOTE: The call timer starts about 12 seconds after the last digit is dialled.

3.5 TAKING A CALL

There are two ways to pick up a call:

- 1 Pick up the handset.
- or
- 1 Press **[H]**, and start talking in hands-free mode.

NOTE: If the ringer is off, the incoming call will be indicated on the display (Incoming Call) and by the Call LED (flashing). You can take the call in either of the two ways described above.

3.6 HANDSET VOLUME CONTROL

You can turn the handset volume up or down during a call.

- 1 Press **[V+]** (up) or **[V-]** (down).

3.7 MUTE KEY

The Mute key puts your correspondent on hold so that you can talk to someone else without the first person hearing.

- 1 During the call, press **[M]**.
= BEEP = ▶ A beep is emitted on the line every 10 seconds.
- 2 To resume the conversation, press the Mute key again.

3.8 REDIAL

The Redial function can store the last 10 numbers in memory. There are two ways of redialling a recently called number:

Off-hook mode

- 1 Press **[R]**.
▶ This automatically redials the last number to be called.

On-hook mode

- 1 Press **[R]**.
▶ The most recently dialled number is displayed.
- 2 Use **[V-]** or **[V+]** to scroll through the last 10 numbers dialled.

- 3 Press **[OK]** or pick up the handset or press the hands-free key **[H]**.
▶ This automatically dials the number displayed.

Deleting a number

If you want to erase the traces of your outgoing calls, you can delete the numbers from the redial memory.

- 1 Press **[R]**.
▶ The most recently dialled number is displayed.
- 2 Use **[V-]** or **[V+]** to select the number you want to delete.
- 3 Press **[OK]**.
- 4 Use **[V-]** or **[V+]** to select "Erase" (to delete the selected number).
or
"Erase All" (to delete all of the numbers).
- 5 Press **[OK]** to confirm.

4. SETTINGS

Your TEMPORIS 700 has a "Phone Setting" menu. To access the various sub-menus from the home screen, follow the instructions below.

You can return to the home screen from anywhere in any menu or sub-menu by pressing **[P]** again. This will cancel any action that you started but didn't finish. If you make a mistake, e.g. if you enter an invalid date, you will hear 3 warning beeps.

4.1 DISPLAY CONTRAST

- 1 Press **[P]**, then press **[OK]** twice.
- 2 Use the **[V-]** key to increase the contrast or **[V+]** to decrease the contrast.
- 3 Press **[OK]** to confirm your choice.

4.2 RINGER MELODY AND VOLUME

4.2.1 To set the melody

- 1 Press **[P]**.
- 2 Press **[OK]**.
- 3 Press **[V-]** until you see "Ringer".
- 4 Press **[OK]** twice.
 - ▶ The set melody is played.
- 5 To change the melody, press **[V-]** (choice of 10 ringtones).
- 6 To confirm your choice, press **[OK]**.

4.2.2 To adjust the ringer volume

- When a call comes in**
- 1 Press **[V-]** or **[V+]** to adjust the volume (level 1, 2, 3 or OFF).
 - ▶ The chosen ringer volume setting will apply to subsequent calls as well.
 - ▶ At level 0, the display will indicate "Ringer Off".

At all other times

- 1 Press **[P]**.
- 2 Press **[OK]**.
- 3 Press **[V-]**.
- 4 Press **[OK]**.
- 5 Press **[V-]**.
- 6 Press **[OK]**.
- 7 The default volume level is 3. To change this, press **[V-]** until you reach the desired level: 1, 2 or 3.
- 8 Confirm by pressing **[OK]**.
- 9 To cut the ringer, select 0, and confirm by pressing **[OK]**.

4.3 DISPLAY LANGUAGE

- 1 Press **[P]**.
- 2 Press **[OK]**.
- 3 Press **[V-]**.
- 4 Press **[OK]**.
- 5 Press **[V-]**.
- 6 Press **[OK]**.
- 7 To edit the name, press **[OK]**.
- 8 Enter the new name and press **[OK]**.
- 9 Confirm the chosen language with **[OK]**.

4.4 DATE AND TIME

- 1 Press **[P]**.
- 2 Press **[V-]**.
- 3 Press **[OK]** twice.
- 4 Press **[OK]**.
- 5 Press **[V-]** until you reach the desired language (Français, Deutsch, Nederlands, Português, Italiano, English, Español)
- 6 Confirm the chosen language with **[OK]**.

4.5 TYPE OF DIALLING

The default dialling mode is tone dialling (DTMF).

- 1 Press **[P]**.
- 2 Press **[V-]**.
- 3 Press **[OK]** twice.
- 4 Press **[OK]**.
- 5 Press **[V-]** to dial your correspondent's number.
- or
- 5 Pick up the handset and make the call.

NOTE: The call timer starts about 12 seconds after the last digit is dialled.

Using a memory key to make a call

- 1 Press the memory key associated with the person you want to call.
- 2 Pick up the handset to initiate the call.

or

- 2 Press **[H]** to talk in hands-free mode.

NOTE: The call timer starts about 12 seconds after the last digit is dialled.

4.6 FLASH TIME

The default flash time is 100 ms.

- 1 Press **[P]**.
- 2 Press **[OK]**.
- 3 Press **[V-]** to obtain "Call Settings".
- 4 Press **[OK]**.
- 5 Press **[V-]** to obtain "Flash Time".
- 6 Press **[OK]**.
- 7 Press **[V-]** to select the desired flash time (100, 300, 600 or some other value).
- 8 Press **[OK]** to confirm.

4.7 PAUSE TIME

- 1 Press **[P]**.
- 2 Press **[OK]**.
- 3 Press **[V-]** to obtain "Call Settings".
- 4 Press **[OK]**.
- 5 Press **[V-]** to obtain "Pause Time".
- 6 Press **[OK]**.
- 7 Press **[V-]** to scroll through the pause time settings (1.5s, 2s, 3s or 4s).
- 8 Press **[OK]** to confirm the chosen pause time.

4.8 KEYPAD LOCK/UNLOCK

Locking the keypad can prevent unwarranted calls being made. By default, a maximum of 4 digits can be dialled when the keypad is locked.

This maximum number of digits can be modified (see Section 7 "Installer menu").

When the keypad is locked, the function keys on the left of the keypad are inoperative.

Locking

- 1 Press **[P]**.
- 2 Press **[V-]** to obtain "Keypad Lock".
- 3 Press **[OK]** to confirm.
- 4 Enter the PIN code (by default, 0000) and press **[OK]** to confirm.

To change the PIN code, see Section 4.10.

Unlocking

- 1 Press **[P]**.
- 2 Press **[V-]** to obtain "Keypad Lock".
- 3 Press **[OK]** to confirm.
- 4 Enter the PIN code (by default, 0000) and press **[OK]** to confirm.

4.9 MEMORY KEYS AND PHONEBOOK

The TEMPORIS 700 has a phonebook capacity of 170 names and numbers and 10 quick-dial memories.

4.9.1 Programming the memory keys

- 1 Press one of the 10 quick-dial memory keys.
- 2 Press **[OK]**.
- 3 Wait for the cursor to move on before you enter the next letter.
- 4 Attendez que le curseur se déplace avant de taper la lettre suivante.
E.g.: To enter an M, press the **[M]** key once;
To enter an R, press the **[R]** key three times.

- 5 Press **[OK]**.
- 6 Enter the number, using the keypad.
- 7 Press **[OK]** to save.

NOTE: Use the **[OK]** key to erase a letter or digit.

NOTE: If "Block Mem. Keys" is enabled in the installer menu, the memory keys cannot be re-programmed or erased.

Modifying a memory key

- 1 Press the desired memory key **[M]**.
- 2 Press **[OK]**.
- 3 To edit the name, press **[OK]**.
- 4 Enter the name, using the keypad.
- 5 Press **[OK]** to confirm.

Erasing a memory key

- 1 Press the memory key **[M]**.
- 2 Press **[OK]**.
- 3 Press **[OK]** to confirm.

Storing names and numbers in the phonebook

- 1 Press **[P]**.
- 2 Press **[OK]**.
- 3 To edit the name, using the keypad (see Section 4.9.1).
- 4 Press **[OK]**.
- 5 Enter the number.
- 6 Press **[OK]**.

NOTE: Use the **[OK]** key to change a mistyped letter or digit before you save.

Editing a phonebook entry

- 1 Press **[P]**.
- 2 Enter the first letter, or the first two letters, of the name you are looking for.
- 3 Press **[OK]**.
- 4 Press **[V-]** 4 times to reach "Modify".
- 5 Press **[OK]**.
- 6 To edit the name, press **[OK]**.
- 7 Enter the new name and press **[OK]**.
- 8 To edit the number, press **[OK]**.
- 9 Enter the new number and press **[OK]**.

Deleting an entry from the phonebook

- 1 Press **[P]**.
- 2 Enter the first letter, or the first two letters, of the name you are looking for.
- 3 Press **[OK]** twice.
- 4 **Date:** Using the number keys, enter the day followed by the month (e.g. 12 and 05 for May 12th).
- 5 **Time:** Enter the time (e.g. 16 and 45 for 16:45).
- 6 Press **[OK]** to confirm.

Deleting all the entries in the phonebook

- 1 Repeat steps **1** and **2**.
- 2 Use the **[V-]** or **[V+]** key to select "Erase".
- 3 Press **[OK]** to confirm.

4.10 PIN CODE

To access certain functions on your TEMPORIS 700 you need to use a PIN code.

By default, the PIN code is 0000. You can modify this to any number of your choosing.

- 1 Press **[P]**.
- 2 Press **[OK]**.
- 3 Press **[V-]** to obtain "PIN Keylock".
- 4 Press **[OK]**.
- 5 Enter the default code (0000) or the modified code (4 digits).
- 6 Press **[OK]**.
- 7 Enter the new code (4 digits).
- 8 Press **[OK]**.
- 9 Confirm the new code.
- 10 Press **[OK]**.

4.11 SERVICE KEYS

The **[1-9]**, **[*]** and **[#]** keys on the keypad can be programmed to store various numbers. For example, the **[1-9]** (Voice Mailbox) key can be used to store the number of the voicemail server.

- 1 Press **[P]**.
- 2 Press **[OK]**.
- 3 Press **[V-]** to obtain "Call Settings".
- 4 Press **[OK]**.
- 5 Press **[V-]** 4 times to obtain "Voice Mailbox".
- 6 Press **[OK]**.
- 7 Press **[V-]** to select the desired flash time (100, 300, 600 or some other value).
- 8 Press **[OK]** to confirm.

Proceed in the same way for the other 2 keys: Service A, Service B.

- 1 Press **[P]**.
- 2 Press **[OK]**.
- 3 Press **[V-]** to obtain "Call Settings".
- 4 Press **[OK]**.
- 5 Press **[V-]** 6 times for "Service A" or **[V+]** 7 times for "Service B".
- 6 Enter the desired number, using the keypad.
- 7 Press **[OK]**.

To dial a number stored on one of these 3 keys

- 1 Pick up the handset (or use hands-free mode).
- 2 Press and hold **[1-9]**, **[*]** or **[#]** for at least 2 seconds.
 - ▶ The number is dialled.

5. USING THE "CALLER ID" SERVICE*

Your network operator provides a number of subscription-only services.

Your TEMPORIS 700 is compatible with the "Caller ID" service in hands-free or off-hook mode.


This service tells you the name or number of the caller before you take the call, and when you are on the line.

5.1 CALL LIST*

The Call list is linked to the network operator's caller ID service.

The list can store up to 70 numbers of people who have tried to call you. When the memory is full, the oldest call (bottom of the list) is deleted to make room for the most recent.

The display icons indicate various caller ID data:



* Subject to availability and subscription from your network operator. For further details, contact your operator.

5.2 VIEWING THE CALL LIST

If you have new unanswered calls, the **[P]** icon appears.

- 1 To consult the Call list, press **[P]**.
- 2 Press **[V-]** to view the other calls.

While looking up a number


- 1 To call the number, press **[OK]**.
- 2 To save a number in the phonebook, press **[P]** followed by **[OK]**.
- 3 Then press **[M]** to store it in the phonebook or on one of the memory keys **[M]**.
- 4 To delete a contact, press **[OK]**.
- 5 Press **[V-]** to reach "Erase".
- 6 Press **[OK]** to confirm.

NOTE: "Erase All" (by pressing **[V-]** again) deletes all the calls from the list.

6. CONNECTING AND USING A HEADSET*

6.1 CONNECTION

- 1 Remove the plastic stopper on the left of the base of the telephone.
- 2 Connect the RJ9 headset cable to the **[H]** socket.



6.2 HEADSET MODE

Once the headset is connected:

To take an incoming call

- 1 Press **[H]**.

ALCATEL

TEMPORIS™ 700




Guide d'utilisation

2. INSTALLATION DE VOTRE TÉLÉPHONE

2.1 BRANCHEMENT DU COMBINÉ


- Connecter le cordon spirale au combiné (A) et à la prise située sur le côté gauche du téléphone (B).



2.2 BRANCHEMENT DU TÉLÉPHONE


- Connecter le cordon téléphonique à la prise droite situé sous le poste et à la prise murale.

REMARQUE : La prise supplémentaire permet la connexion d'un modem.



2.3 FIXATION MURALE

- Retourner l'ergot (petite pièce plastique striée) situé sur la base à l'aide d'une pièce de monnaie.
- Percer deux trous de 6 mm espacés de 70 mm.
- Insérer des chevilles puis visser des vis à bois* (3,5 mm de diamètre et 30 mm de long).
- Fixer la base sur les 2 vis en la tirant vers le bas.



3. USAGE GÉNÉRAL

3.1 TÉMOIN LUMINEUX D'APPEL / DE MESSAGE EN ATTENTE

Le voyant clignote à la même cadence que la sonnerie quand vous recevez un appel. Il s'éteint dès que vous décrochez.

Si vous êtes relié à un central téléphonique privé ALCATEL avec messagerie, le témoin lumineux de message en attente vous informe de la présence d'un message dans votre boîte vocale.

- Vous avez le choix entre deux modes de numérotation :
 - numérotation après décrochage du combiné,
 - numérotation sans décrocher.

3.2 NUMÉROTÉ SANS DÉCROCHER

- Appuyer sur la touche Mains-libres puis composer le numéro du correspondant.
- Décrocher pour établir la conversation. La touche est rétro-éclairée en bleu.

3.3 UTILISER LE MODE MAINS-LIBRES

Si vous êtes en conversation, combiné décroché, et que vous souhaitez entendre et communiquer avec votre correspondant sur le haut-parleur :

- Appuyer sur la touche puis raccrocher le combiné.
 - Les personnes autour de vous peuvent participer à la conversation.
 - La touche est rétro-éclairée en bleu.
- Régler le volume sonore à l'aide des touches et .
- Reprendre le combiné pour revenir à une conversation confidentielle.

3.4 NUMÉROTATION À PARTIR DU RÉPERTOIRE / MÉMOIRES D'ACCÈS DIRECT

Le répertoire peut contenir jusqu'à 170 noms et numéros ainsi que 10 mémoires directes. Chaque emplacement mémoire peut contenir jusqu'à 20 chiffres et 16 caractères.

Pour programmer le répertoire et les mémoires directes, se reporter au paragraphe 4.9.

Appeler à partir du répertoire

- Appuyer sur la touche .

Recherche alphabétique

Taper la première lettre ou les deux premières lettres du nom recherché. Le nom commençant par cette lettre s'affiche. Pour les suivants, appuyer sur .

ou

Recherche manuelle

Utiliser la touche ou pour faire défiler les noms du répertoire jusqu'à ce que le nom ou correspondant de votre choix s'affiche.

Appuyer sur la touche pour passer votre appel.

Appuyer sur la touche pour composer le numéro de votre correspondant.

ou

Décrocher le combiné et passer votre appel.

NOTE : Le compteur de durée d'appel s'endèche environ 12 secondes après la composition du dernier chiffre.

Appeler à partir d'une mémoire d'accès direct

Appuyer sur la touche d'accès direct associée au correspondant de votre choix.

Décrocher le combiné pour lancer l'appel.

Appuyer sur la touche pour appeler en mode mains-libres.

NOTE : Le compteur de durée d'appel s'endèche environ 12 secondes après la composition du dernier chiffre.

3.5 RÉCEPTION D'UN APPEL

Il existe deux façons de prendre un appel :

- Décrocher le combiné.

ou

- Appuyer sur la touche , et commencer la conversation en mode mains-libres.

NOTE : Si la sonnerie est désactivée, l'appel entrant sera signalé sur l'affichage (Appel) et par le voyant de sonnerie (clignotant). Prendre alors l'appel de l'une ou l'autre façon décrite ci-avant.

3.6 RÉGLER LE VOLUME SONORE DANS LE COMBINÉ

Vous pouvez augmenter ou diminuer le volume sonore du combiné en cours de communication.

- Appuyer sur la touche (augmenter) ou sur la touche (diminuer).

3.7 TOUCHE SECRET

La touche Secret met en attente votre correspondant et vous permet de converser avec une tierce personne sans être entendu de votre premier interlocuteur.

- En cours de communication, appuyer sur .
 - Un bip est émis sur la ligne toutes les 10 secondes.
- Pour reprendre la conversation, appuyer de nouveau sur la touche Secret.

3.8 RAPPEL DU DERNIER NUMÉRO COMPOSÉ

La capacité mémoire de la fonction rappel est de 10 numéros.

Il existe deux façons de rappeler le dernier numéro composé :

Mode combiné décroché

- Appuyer sur la touche .

→ L'appareil compose automatiquement le dernier numéro appelé.

Mode combiné raccroché

- Appuyer sur la touche .

→ Le dernier numéro composé s'affiche.

Utiliser la touche ou pour faire afficher les 10 derniers numéros composés.

- Appuyer sur la touche ou décrocher le combiné ou appuyer sur la touche mains-libres .

→ L'appareil composera automatiquement le numéro affiché.

Supprimer un numéro

Si vous ne désirez pas laisser de traces de vos derniers appels sortants, vous pouvez supprimer leurs numéros individuellement.

- Appuyer sur la touche .

→ Le dernier numéro composé s'affiche.

Utiliser la touche ou pour sélectionner le numéro à supprimer.

- Appuyer sur la touche .

Utiliser la touche ou pour choisir "Effacer" (suppression du numéro sélectionné).

ou "Effacer Tout" (suppression de tous les numéros).

- Appuyer sur la touche pour confirmer.

* Les vis ne sont pas fournies dans l'emballage.

4. PROGRAMMATION DE VOTRE TEMPORIS 700

Votre **TEMPORIS 700** possède un menu "Réglages". Pour accéder aux différents sous-menus depuis l'écran d'accueil, procédez comme indiqué ci-dessous.

Vous pouvez retourner à l'écran d'accueil depuis n'importe quel endroit du menu ou sous-menu en appuyant une nouvelle fois sur la touche . Toute action initiée mais non terminée sera annulée.

Si vous faites une erreur, par exemple, si vous entrez une date incorrecte, 3 bips sonores vous en avertissent.

4.1 RÉGLAGE DU CONTRASTE DE L'AFFICHEUR

- Appuyer sur la touche puis deux fois sur .
- Utiliser la touche pour augmenter le contraste ou pour diminuer le contraste.
- Appuyer sur pour valider le choix.

4.2 RÉGLAGE DE LA SONNERIE (MÉLODIE ET VOLUME)

4.2.1 Réglage de la mélodie

- Appuyer sur la touche .
- Appuyer sur la touche pour atteindre "Sonnerie".
- Appuyer deux fois sur la touche .
 - La mélodie programmée sera émise.
- Pour modifier la mélodie, appuyer sur (10 sonneries au choix).
- Pour valider la sonnerie choisie, appuyer sur .

4.2.2 Réglage du volume de la sonnerie

Pendant l'arrivée d'un appel

- Utiliser la touche ou pour régler le volume (sonnerie coupée, volume 1, 2 ou 3).
 - Ce choix déterminera le volume de la sonnerie de tous les appels suivants.
- Si vous êtes sur le niveau 0, l'afficheur indiquera "Sonnerie coupée".

En dehors d'un appel entrant

- Appuyer sur la touche .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Appuyer sur .
- Par défaut le volume de la sonnerie est le 3. Pour le modifier, appuyer sur jusqu'à atteindre le volume souhaité 1, 2 ou 3.
- Valider avec .

Pour couper la sonnerie, sélectionner 0. Puis valider avec .

En dehors d'un appel entrant

- Appuyer sur la touche .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Par défaut le volume de la sonnerie est le 3. Pour le modifier, appuyer sur jusqu'à atteindre le volume souhaité 1, 2 ou 3.
- Valider avec .

Pour couper la sonnerie, sélectionner 0. Puis valider avec .

En dehors d'un appel entrant

- Appuyer sur la touche .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Par défaut le volume de la sonnerie est le 3. Pour le modifier, appuyer sur jusqu'à atteindre le volume souhaité 1, 2 ou 3.
- Valider avec .

Pour couper la sonnerie, sélectionner 0. Puis valider avec .

En dehors d'un appel entrant

- Appuyer sur la touche .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Par défaut le volume de la sonnerie est le 3. Pour le modifier, appuyer sur jusqu'à atteindre le volume souhaité 1, 2 ou 3.
- Valider avec .

Pour couper la sonnerie, sélectionner 0. Puis valider avec .

En dehors d'un appel entrant

- Appuyer sur la touche .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Par défaut le volume de la sonnerie est le 3. Pour le modifier, appuyer sur jusqu'à atteindre le volume souhaité 1, 2 ou 3.
- Valider avec .

Pour couper la sonnerie, sélectionner 0. Puis valider avec .

En dehors d'un appel entrant

- Appuyer sur la touche .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Par défaut le volume de la sonnerie est le 3. Pour le modifier, appuyer sur jusqu'à atteindre le volume souhaité 1, 2 ou 3.
- Valider avec .

Pour couper la sonnerie, sélectionner 0. Puis valider avec .

En dehors d'un appel entrant

- Appuyer sur la touche .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Par défaut le volume de la sonnerie est le 3. Pour le modifier, appuyer sur jusqu'à atteindre le volume souhaité 1, 2 ou 3.
- Valider avec .

Pour couper la sonnerie, sélectionner 0. Puis valider avec .

En dehors d'un appel entrant

- Appuyer sur la touche .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Par défaut le volume de la sonnerie est le 3. Pour le modifier, appuyer sur jusqu'à atteindre le volume souhaité 1, 2 ou 3.
- Valider avec .

Pour couper la sonnerie, sélectionner 0. Puis valider avec .

En dehors d'un appel entrant

- Appuyer sur la touche .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Par défaut le volume de la sonnerie est le 3. Pour le modifier, appuyer sur jusqu'à atteindre le volume souhaité 1, 2 ou 3.
- Valider avec .

Pour couper la sonnerie, sélectionner 0. Puis valider avec .

En dehors d'un appel entrant

- Appuyer sur la touche .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Par défaut le volume de la sonnerie est le 3. Pour le modifier, appuyer sur jusqu'à atteindre le volume souhaité 1, 2 ou 3.
- Valider avec .

Pour couper la sonnerie, sélectionner 0. Puis valider avec .

En dehors d'un appel entrant

- Appuyer sur la touche .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Par défaut le volume de la sonnerie est le 3. Pour le modifier, appuyer sur jusqu'à atteindre le volume souhaité 1, 2 ou 3.
- Valider avec .

Pour couper la sonnerie, sélectionner 0. Puis valider avec .

En dehors d'un appel entrant

- Appuyer sur la touche .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Par défaut le volume de la sonnerie est le 3. Pour le modifier, appuyer sur jusqu'à atteindre le volume souhaité 1, 2 ou 3.
- Valider avec .

Pour couper la sonnerie, sélectionner 0. Puis valider avec .

En dehors d'un appel entrant

- Appuyer sur la touche .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Par défaut le volume de la sonnerie est le 3. Pour le modifier, appuyer sur jusqu'à atteindre le volume souhaité 1, 2 ou 3.
- Valider avec .

Pour couper la sonnerie, sélectionner 0. Puis valider avec .

En dehors d'un appel entrant

- Appuyer sur la touche .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Par défaut le volume de la sonnerie est le 3. Pour le modifier, appuyer sur jusqu'à atteindre le volume souhaité 1, 2 ou 3.
- Valider avec .

Pour couper la sonnerie, sélectionner 0. Puis valider avec .

En dehors d'un appel entrant

- Appuyer sur la touche .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Par défaut le volume de la sonnerie est le 3. Pour le modifier, appuyer sur jusqu'à atteindre le volume souhaité 1, 2 ou 3.
- Valider avec .

Pour couper la sonnerie, sélectionner 0. Puis valider avec .

En dehors d'un appel entrant

- Appuyer sur la touche .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Par défaut le volume de la sonnerie est le 3. Pour le modifier, appuyer sur jusqu'à atteindre le volume souhaité 1, 2 ou 3.
- Valider avec .

Pour couper la sonnerie, sélectionner 0. Puis valider avec .

En dehors d'un appel entrant

- Appuyer sur la touche .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Appuyer sur .
- Appuyer sur la touche .
- Par défaut le volume de la sonnerie est le 3. Pour le modifier, appuyer sur jusqu'à atteindre le volume souhaité 1, 2 ou 3.
- Valider avec .

4.9 PROGRAMMER LES MÉMOIRES DIRECTES

Le téléphone **TEMPORIS 700** possède un répertoire de 170 noms et numéros et 10 mémoires directes.

4.9.1 Programmer les mémoires directes

- Appuyer sur une des 10 touches de mémoire directe.
- Appuyer sur la touche .
- Entrer le nom à l'aide du clavier.
- Attendre que le curseur se déplace avant de taper la lettre suivante.
 - Par ex. : Pour entrer M, appuyer une fois sur la touche .
 - Pour entrer R, appuyer trois fois sur la touche .

Appuyer sur la touche .

Entrer le numéro à l'aide du clavier.

Appuyer sur la touche pour enregistrer.

Note : Utiliser la touche pour effacer une lettre ou un chiffre.

Note : Si le menu installateur "Bloq. Mémoires" est activé, il n'est pas possible de programmer ou effacer les mémoires directes.

Modifier une mémoire directe

- Appuyer sur la touche directe souhaitée.
- Appuyer sur la touche .
- Modifier le nom avec la touche .
- Entrer le nom avec le clavier.
- Appuyer sur la touche pour confirmer.

Effacer une mémoire directe

- Appuyer sur la mémoire directe .
- Appuyer sur la touche .
- Appuyer sur la touche pour confirmer.

Mémoriser des noms et numéros dans le répertoire

- Appuyer sur la touche .
- Appuyer sur la touche .
- Entrer le nom à l'aide du clavier (voir paragraphe 4.9.1).
- Appuyer sur la touche .
- Entrer le numéro.
- Appuyer sur la touche .

Note : Utiliser la touche pour modifier une lettre ou un chiffre erroné avant d'enregistrer.

Modifier une donnée du répertoire